

DIN Rail DMX512 Constant Voltage Decoder

User Manual



(Please read through this manual carefully before use)

Brief Introduction

Welcome to use the DIN Rail high Power DMX512 constant voltage decoder is specially developed for constant voltage LED lamps. It adopts advanced microcomputer control technology to convert universal DMX512/1990 digital signal to PWM signal. 40 output channels, can be used to control constant voltage single color, color temperature, RGB, RGBW, RGBWY type lamps. DIN Rail/screw dual-use installation method for easy installation.

Specifications

| | |
|------------------|--------------------------------|
| Model | 40CH DMX512 Decoder |
| Input voltage | DC12V-24V |
| Max load current | 3A×40CH |
| Max output power | 1440W (12V)/2880W(24V) |
| Input signal | DMX512/8 bit/16 bit selectable |
| Output Signal | Constant Voltage PWM×40CH |

| | |
|----------------|------------------------|
| Decode channel | 40CH |
| DMX512 socket | RJ45、Terminal block |
| Dimension | L218 X W90 X H58.5(mm) |
| Weight (G.W) | 372g |

Basic Features

1. Automatically adapts input voltage DC12V-24V.
2. Input standard DMX512 signal; 3-digital-display shows DMX address code.
3. 6 color changing modes and 10 speed scales.
4. DMX decoding supports 8-bit, 16-bit.
5. Indicator of the DMX512 signal receiving status.
6. Wrong wiring protection at DMX port. Power loss memory function.
7. The DIN rail style facilitates the installation of large-scale projects.


Safety warnings

Please don't install this controller in lightening, intense magnetic and high-voltage fields.

1. To reduce the risk of component damage and fire caused by short circuit, make sure correct connection
2. Always be sure to mount this unit in an area that will allow proper ventilation to ensure a fitting temperature.
3. Check if the voltage and power adapter suit the controller
(please select DC12-24V power supply with constant voltage)
4. Don't connect cables with power on; make sure a correct connection and no short circuit checked with instrument before power on.
5. Please don't open controller cover and operate if problems occur.

The manual is only suitable for this model; any update is subject to change without prior notice.

Dimensions:

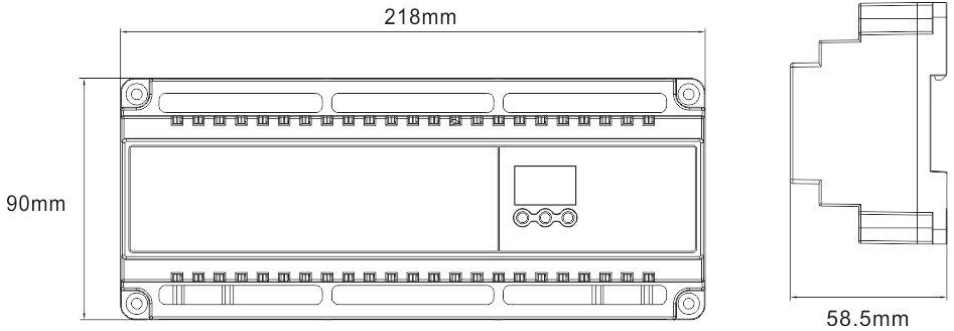


Operating instructions

1. The decoder has three buttons, which are No. 1, No. 2, and button No.3. When power on, the digital displays the current digital DMX address. The last decimal point will flash when there is signal in. Three-digit-display goes off without operation for 30 seconds, press any key to turn it on.

2. Set DMX address

Long press the button No. 1 for 2 seconds to enter the DMX512 address setting, the digital tube flashes, button No. 1 to set the hundredth digit, the value is 0-5, button No.2 to set the tenth digit, the value is 0-9, button No.3 to set a units digit, the value is 0-9, DMX512 address value 001-512;

Press and hold the button No. 1 for 2 seconds to exit the setting DMX512 address. NO operate for 10 seconds, will exit automatically.

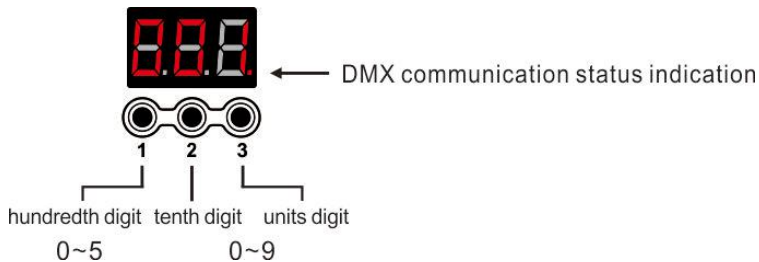


The last decimal point will flash when there is signal in. If not received, the decimal point does not ON, and the digital tube only displays the current DMX address. When the input signal of the decoder is wrong connected or

short-circuit, the decimal point of the digital tube does not ON, and the digital tube only displays the current DMX address, the decoder works again after the short circuit or the wrong wiring is cleared.

Enter the self-test mode, as follows:

| Numerical settings | Pattern mode | Numerical settings | Pattern mode |
|--------------------|---------------------|--------------------|----------------|
| 513 | Solid color: Red | 520-529 | RGB Skipping |
| 514 | Solid color: Green | 530-539 | Color Skipping |
| 515 | Solid color: Blue | 540-549 | White flicker |
| 516 | Solid color: Yellow | 550-559 | RGB Fading |
| 517 | Solid color: Purple | 560-569 | Color Fading |
| 518 | Solid color: Cyan | 570-579 | White Fading |
| 519 | Solid color: White | 580-599 | All bright |

*520-579, First two digital indicate the modes, the third one shows the speed. 10 speed levels ,from 0-9 speed decreasing. Total: 6 modes ,such as:

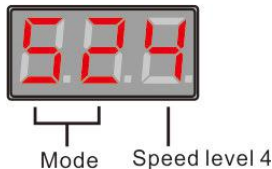

Speed for Program 520 – 579 (Color Changing Fading Mode) for one step and not for the whole program:

0=0,5 sec. | 1=1 sec. | 2=2 sec. | 3=3 sec. | 4=5 sec. | 5=10 sec. | 6=15 sec. | 7=30 sec. | 8=60 sec. | 9=120 sec.

Speed for Program 570 - 579 (one step and not for the whole program):

0=0,02 sec. | 1= 0,04 sec. | 2=0,1 sec. | 3=0,2 sec. | 4=0,5 sec. | 5=1 sec. | 6=2 sec. | 7=5 sec. | 8=10 sec. | 9=15 sec.

3. Control mode settings

(1) The 40-channel decoder can work in five control modes of DIM\CT\RGB\RGBW\RGBWY.

(2) The 32-channel decoder can work in four control modes of DIM\CT\RGB\RGBW.

(3) The 24-channel decoder can work in three control modes of DIM\CT\RGB.

Long press the button No.2 for 2 seconds to enter the control mode setting, the digital tube flashes, press the button No.3 to switch settings, the digital display 1CH, 2CH, 3CH, 4CH, 5CH, corresponding to DIM \ CT \ RGB \ RGBW \ RGBWY five modes.

When the working mode is RGB, the white light in the built-in mode corresponds to RGB, in the other modes W is ON.

Press and hold the button No.2 for 2 seconds to exit the control mode setting. NO operate for 10 seconds, will exit automatically.



DIM control mode



CT control mode



RGB control mode



RGBW control mode



RGBWY control mode

3. DMX digit setting

The decoder works on 8-bit or 16-bit.

Long press the button No. 3 for 2 seconds to enter the setting, the digital tube flashes, press the button No. 3 to switch settings, the digital tube displays 08b, 16b respectively corresponding to 8-bit, 16-bit mode. Press button No. 3 again for 2 seconds to exit the DMX digit setting. NO operate for 10 seconds, will exit automatically.




8 bit



16 bit

Conjunction Diagram

1) Connet to DMX system (take 24CH decoder as example):

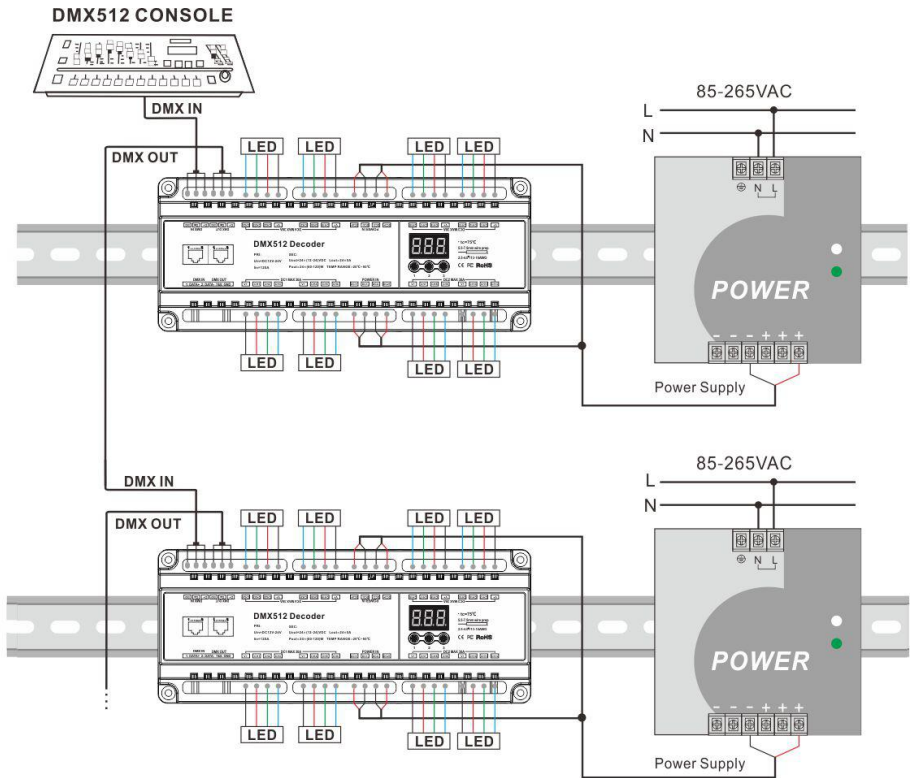

After-Sales

From the day you purchase our products within 3 years, if being used properly in accordance with the instruction, and quality problems occur, we provide free repair or replacement services except the following cases:

- 1.Any defects caused by wrong operations.
- 2.Any damages caused by inappropriate power supply or abnormal voltage.
- 3.Any damages caused by unauthorized removal, maintenance, modifying circuit, incorrect connections and replacing chips.
- 4.Any damages due to transportation, breaking, flooded water after the purchase.
- 5.Any damages caused by earthquake, fire, flood, lightning strike etc force majeure of natural disasters.

6. Any damages caused by negligence, inappropriate storing at high temperature and humidity environment or near harmful chemicals.

7. Product has been updated.